

## INSTRUCTIONS FOR #84904 BLANK BLADE PLATE FOR THE MICROLUX TILT ARBOR SAW

*NOTE: THIS ITEM IS FOR USE ON MICROLUX  
TABLE SAWS HAVING A 5-3/8" LONG BLADE PLATE*

Tools needed for assembly:  
Phillips Head Screwdriver

Begin by unplugging the saw from house current.

Move the saw blade to its lowest position.

Remove the two screws which retain the metal blade plate and carefully set them and the metal plate aside. Blow out any dust from the blade plate area.

Remove the protective film from the blank blade plate.

Install the blank blade plate into the cavity in the table top and replace the two retaining screws. Be careful not to tighten the screws so much that the plate cracks. **Note:** Due to variations in manufacturing operations, the surface of the new blade plate may be slightly below the table surface. If this occurs, please remove the screws and add a shim of paper or tape to raise the plate until it is flush. If it falls slightly above, slightly chamfer the edges with some sandpaper to reduce interference while feeding stock.

Tilt the blade to the desired angle.

Plug in the saw.

Turn on the power and adjust speed to the slowest setting.

Slowly raise the blade to cut a slot into the blade plate. Raise the blade only high enough to protrude only slightly above the workpiece to be cut. If the blade is raised too high, the slot will approach the edge of the plate and weaken it.

### Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922  
Tech Support 908-464-1094  
www.micromark.com MMTechService@micromark.com

MM122810

## INSTRUCTIONS FOR #84904 BLANK BLADE PLATE FOR THE MICROLUX TILT ARBOR SAW

*NOTE: THIS ITEM IS FOR USE ON MICROLUX  
TABLE SAWS HAVING A 5-3/8" LONG BLADE PLATE*

Tools needed for assembly:  
Phillips Head Screwdriver

Begin by unplugging the saw from house current.

Move the saw blade to its lowest position.

Remove the two screws which retain the metal blade plate and carefully set them and the metal plate aside. Blow out any dust from the blade plate area.

Remove the protective film from the blank blade plate.

Install the blank blade plate into the cavity in the table top and replace the two retaining screws. Be careful not to tighten the screws so much that the plate cracks. **Note:** Due to variations in manufacturing operations, the surface of the new blade plate may be slightly below the table surface. If this occurs, please remove the screws and add a shim of paper or tape to raise the plate until it is flush. If it falls slightly above, slightly chamfer the edges with some sandpaper to reduce interference while feeding stock.

Tilt the blade to the desired angle.

Plug in the saw.

Turn on the power and adjust speed to the slowest setting.

Slowly raise the blade to cut a slot into the blade plate. Raise the blade only high enough to protrude only slightly above the workpiece to be cut. If the blade is raised too high, the slot will approach the edge of the plate and weaken it.

### Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922  
Tech Support 908-464-1094  
www.micromark.com MMTechService@micromark.com

MM122810

## INSTRUCTIONS FOR #84904 BLANK BLADE PLATE FOR THE MICROLUX TILT ARBOR SAW

*NOTE: THIS ITEM IS FOR USE ON MICROLUX  
TABLE SAWS HAVING A 5-3/8" LONG BLADE PLATE*

Tools needed for assembly:  
Phillips Head Screwdriver

Begin by unplugging the saw from house current.

Move the saw blade to its lowest position.

Remove the two screws which retain the metal blade plate and carefully set them and the metal plate aside. Blow out any dust from the blade plate area.

Remove the protective film from the blank blade plate.

Install the blank blade plate into the cavity in the table top and replace the two retaining screws. Be careful not to tighten the screws so much that the plate cracks. **Note:** Due to variations in manufacturing operations, the surface of the new blade plate may be slightly below the table surface. If this occurs, please remove the screws and add a shim of paper or tape to raise the plate until it is flush. If it falls slightly above, slightly chamfer the edges with some sandpaper to reduce interference while feeding stock.

Tilt the blade to the desired angle.

Plug in the saw.

Turn on the power and adjust speed to the slowest setting.

Slowly raise the blade to cut a slot into the blade plate. Raise the blade only high enough to protrude only slightly above the workpiece to be cut. If the blade is raised too high, the slot will approach the edge of the plate and weaken it.

### Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922  
Tech Support 908-464-1094  
www.micromark.com MMTechService@micromark.com

MM122810

## INSTRUCTIONS FOR #84904 BLANK BLADE PLATE FOR THE MICROLUX TILT ARBOR SAW

*NOTE: THIS ITEM IS FOR USE ON MICROLUX  
TABLE SAWS HAVING A 5-3/8" LONG BLADE PLATE*

Tools needed for assembly:  
Phillips Head Screwdriver

Begin by unplugging the saw from house current.

Move the saw blade to its lowest position.

Remove the two screws which retain the metal blade plate and carefully set them and the metal plate aside. Blow out any dust from the blade plate area.

Remove the protective film from the blank blade plate.

Install the blank blade plate into the cavity in the table top and replace the two retaining screws. Be careful not to tighten the screws so much that the plate cracks. **Note:** Due to variations in manufacturing operations, the surface of the new blade plate may be slightly below the table surface. If this occurs, please remove the screws and add a shim of paper or tape to raise the plate until it is flush. If it falls slightly above, slightly chamfer the edges with some sandpaper to reduce interference while feeding stock.

Tilt the blade to the desired angle.

Plug in the saw.

Turn on the power and adjust speed to the slowest setting.

Slowly raise the blade to cut a slot into the blade plate. Raise the blade only high enough to protrude only slightly above the workpiece to be cut. If the blade is raised too high, the slot will approach the edge of the plate and weaken it.

### Micro-Mark®

340 Snyder Avenue, Berkeley Heights, NJ 07922  
Tech Support 908-464-1094  
www.micromark.com MMTechService@micromark.com

MM122810